

Ultra ES PRO Ultra E PRO

REPLACEMENT KEYPAD
INSTRUCTIONS



Images shown actual size

KEYPAD SIZE

Determine the correct size of your keypad. The height of the button will either be 1/2" or 11/16". ****Note: both button size and the size of the numbers are different.**

TOOLS NEEDED:

- Small Knife
- Isopropyl Alcohol (Rubbing Alcohol)
- Rag or Cotton Balls
- Marker, Toothbrush or Equivalent Rounded Plastic Rod



Step 1

Using a small knife (eg, paring or pocket knife), get under edge of keypad cover to lift up on adhesive.




Step 2

Remove keypad cover.



Step 3

Clean area with isopropyl alcohol (rubbing alcohol) and rag/cotton balls. Allow to thoroughly dry (~20 minutes). Make sure any adhesive is removed from the lock and the lock recess area is clean.

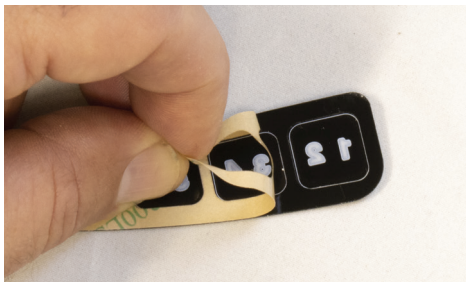

Step 4

Peel the back cover layer from the large end of the keypad cover to reveal the adhesive. **DO NOT TOUCH THE ADHESIVE ON THE KEYPAD.**



Step 5

Carefully place the keypad cover into the recess of the lock. Pull back the cover layer as the keypad cover is positioned into place. Be careful not to wrinkle the cover.



Step 6

Rub the keypad cover's adhesive areas (outside of the keys and between the keys) with the rounded hard plastic end of a plastic marker or toothbrush. This is to get good adherence between the cover and the lock.

IMPORTANT

It is recommended not to use the keypad for 24 hours after installing the keypad cover to allow the adhesive to set. Please use your key during this time period.